



## USER MANUAL



## LED TELEVISION

Model: S32D20

**Please read this user manual carefully,  
and keep it for future reference.**

### IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

#### WARNING:



TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### REGULATORY INFORMATION

This equipment generates and uses can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### CAUTION

DO not attempt to modify this product in any way without written authorization from supplier. Unauthorized modification could void the user's authority to operate this product.

It is not recommended to keep a certain still image displayed on the screen for a long time as well as displaying extremely bright images on screen.

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

### WARNING

To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture.

Don't use the apparatus in tropical climates.

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

The Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment.

Keep minimum distances (5cm) around the apparatus for sufficient ventilation; (Minimum distance around the apparatus for sufficient ventilation.)

No naked flame sources, such as lighted candles, should be placed on the apparatus;

To prevent the spread of fire, keep candles or other open flames away from this product at all times.

## *Safety instructions*

The device may malfunction when under electrostatic discharge. It can be manually resumed by power off and power on again.

### **CAUTION**

#### **Connecting the Power Cord**

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and its if appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

The MAINS plug is used as the disconnect device, and the disconnect device shall remain readily operable.

BOMARE COMPANY SARL declare that the product BM4392 complies with the essential health and safety requirements of the R&TTE directive 1999/5/CE.

Power source of this TV : 100-240V 50/60HZ.

This TV complies with CE standard.

Alternating current:

 
To indicate on the rating plate that the equipment is suitable for alternating current only, to identify the relevant terminals.



## Safety instructions

### IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.

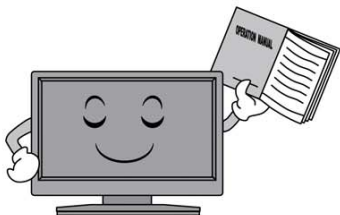


7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.




5. Do not use this apparatus near water.



 8. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

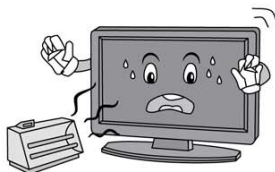

 6. Clean only with a dry cloth.

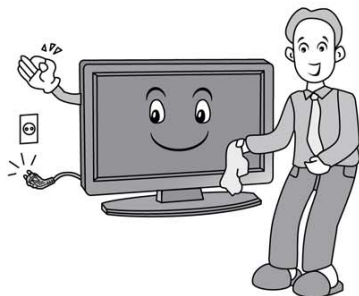

9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

## Safety instructions

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



13. Unplug power cord and antenna during lightning storms or when unused for long periods of time.



11. Only use the attachments/accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



### ON DISPOSAL

- The fluorescent lamp used in this product contain a small amount of mercury.
- Do not dispose of this product with general household waste.
- Disposal of this product must be carried out in accordance to the regulations of your local authority.

### NOTE

- If the TV feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with TV.
- Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However these have no adverse effect on the monitor's performance.
- Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effect on the screen.

## Getting Started

 
### Using the remote control

When using the remote control, aim it at remote sensor on the television. If there is an object between the remote control and the remote sensor on the unit, the unit may not operate.

- ◆ Point the remote control at the REMOTE SENSOR located on the television.
- ◆ When using this television in a very brightly lit area, the infrared REMOTE CONTROL SENSOR may not work properly.
- ◆ The recommended effective distance for using the remote control is about 7 metres.

### Installing Batteries in the Remote Control

1. Open the cover at the back of the remote control.
2. Install two AAA size batteries. Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.
3. Replace the cover.

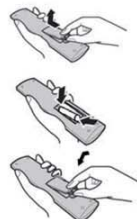

### Battery replacement

You will need to install the batteries into the remote control to make it operate following the instruction below.

When the batteries become weak, the operating distance of the remote control will be greatly reduced and you will need to replace the batteries.

### Notes on Using Batteries:

The use of the wrong type of batteries may cause chemical leakage and/or explosion. Please note the following:

- ◆ Always ensure that the batteries are inserted with the + and - terminals in the correct direction as shown in the battery compartment.
- ◆ Different types of batteries have different characteristics. Do not mix different types.
- ◆ Do not mix old and new batteries. Mixing old and new batteries will shorten battery life and/or cause chemical leakage.
- ◆ Replace batteries as soon as they do not work.
- ◆ Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately with a dry cloth.
- ◆ The batteries may have a shorter life expectancy due to storage conditions. Remove the batteries whenever you anticipate that the remote control will not be used for an extended period.
- ◆ The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

### CAUTION:

- ◆ It may result in an explosion if batteries are replaced incorrectly.
- ◆ Only replace batteries with the same or equivalent type.

### Cable Installation

Please read the relevant content in "Notice for Maintenance and Safety" carefully before the installation and use.

1. Take out the TV from the package and put it in a drafty and flat place.

**NOTE:**

- ◆ When you plug or unplug the TV, computer or other equipments, you must make sure that the AC power has been already shut down; when unplugging the power cable or signal cable, please hold the plug (the insulated part), do not draw the body of the cable.
2. The RF output terminal can be connected with the RF input port of the TV.
  3. The output AV terminal of DVD can be connected with the AV input port of the TV through AV cable.
  4. Connect one end of the VGA cable with the VGA port on computer, connect the other end of the VGA cable with the VGA port on the TV, and tighten the bolts clockwise on the each end of VGA cable.

**NOTE:**

- ◆ While connecting the 15-pin VGA, please do not insert the plug overexertedly, for fear the pin might be broken.
5. Connect one end of the HDMI cable with HDMI output port, connect the other end of the HDMI cable with the HDMI port on the TV.

**NOTE:**

- ◆ While connecting the HDMI, please aim at carefully, do not insert overexertedly, for fear the pin might be broken.
6. Check and make sure that all AV cables are connected with the corresponding ports correctly.
  7. Connect the AC power cable with 100-240V~ power supply.

---

**NOTE:**

- ◆ The range of power input for the TV is 100-240V~ 50/60Hz, do not connect the TV power input port with the AC power out of the above range.
  - ◆ Please hold the insulated part of the plug when you are unplugging the power cable, do not touch directly the metallic part of the cable.
-

### QUICK START GUIDE

---

- **Connection**

1. Connect the mains and antenna.
2. Press the  button on remote control to turn on TV from standby mode.

- **Initial Setup**

When the TV is initially powered on, a sequence of on-screen prompts will assist in configuring basic settings.

1. Select the desired OSD (On Screen Display) language.  
Press the /// button, then press the **OK** button.
2. Select the appropriate country.  
Press the /// button to select the country, then press the **OK** button to Start Channel Tuning.

### Turning on and off the TV

---

- **Turn on the TV**

Connect the AC input cable. At this time the TV will enter standby mode.  
Press the  button on remote control to turn on TV from standby mode.

- **Turn off the TV**

Press the  button on the remote control to enter standby mode.  
Do not leave your set in standby mode for long periods of time. It is best to unplug the set from the mains and aerial.

- **No signal**

There is No Signal menu on screen when there is no input signal. In TV/DTV mode, if there is no signal in fifteen minutes, the TV will turn off automatically. In PC mode, the TV set will automatically turn off in five minutes if no input signal. When VGA cable is connected, the TV turns on automatically.

### Programme Selection

---

- **Using the CH+ /CH- on the panel of TV or on the remote control.**

Press CH+ to increase channel number.  
Press CH- to decrease channel number.

- **Using 0-9 digital buttons.**

You can select the channel number by pressing 0 to 9. (In TV, DTV mode)

- **Using -/-- button**

Using -/-- button enables you to enter double digit channel numbers

### Volume adjustment

---

- Press the **VOL+/-** button to adjust the volume.
- If you want to switch the sound OFF, press the .
- You can release mute by pressing the  or increase/decrease the volume.

### Changing the Input Source

---

You can select the input source by pressing the **INPUT** button on the remote control.  
Press the / button to cycle through the input source, and press the **OK** button to confirm your choice.



## REMOTE CONTROL

The buttons of the original remote control are as following:



### Definition of the buttons on remote control:

1. **STANDBY:** Enter or quit the stand by mode.
2. **MUTE:** Mute or restore sound.
3. **NUMBER BUTTONS:** Use to choose channels.
4. **-/- :** Change the channel bits want to input
5. **↶ :** Return to last viewed program
6. **P.MODE:** Press to cycle through the available video picture mode.
7. **S.MODE:** Press to cycle through the different sound settings.
8. **MENU:** Press to display/disappear the on screen menus or to quit some operations.
9. **SLEEP:** Set the sleep time.
10. **INPUT:** Select signal source.
11. **AUDIO:** Switch between NICAM DUAL /NICAM DUAL /NICAM DUAL + /MONO and switch Audio language in DTV mode.
12. **OK:** Select or confirm menu item.
13. **▲/▼/◀/▶ :** Select direction.
14. **MENU:** Press to display/disappear the on screen menus or to quit some operations.
15. **EXIT:** Quit the current interface.
16. **VOL+/VOL-:** Increase/Decrease audio volume.
17. **CH+/CH-:** Scroll to next/previous channel.
18. **ASPECT:** Adjust displayable aspect ratio.
19. **INFO:** Show channel program information.
20. **LIST :** Channel List Key.
21. **COLOR BUTTONS:** Red/green/yellow/blue key navigation link.
  - ◀◀: Fast reverse (in MEDIA mode)
  - ▶▶: Fast forward (in MEDIA mode)
  - ◀◀: Previous (in MEDIA mode)
  - ▶▶: Next (in MEDIA mode)
  - ▶||: Play / Pause (in MEDIA mode)
  - : Stop (in MEDIA mode)
22. **FAV:** Display the favorites program.
23. **MIX:** Graphics function.
24. **TEXT:** Enter the Teletext, press again for MIX mode, press this button again to exit.
25. **HOLD:** Hold the teletext page on display press again to release.
26. **INDEX:** Go to index page/Enter the recorded list. (In PVR mode).
27. **REVEAL:** Reveal the hidden information of some teletext pages.
28. **SIZE:** Change the size of Teletext screen in display mode.

### NOTE:

 
 
● All pictures in this manual are examples, only for reference, actual product may differ from the pictures.

● The buttons not mentioned here are not used.

---

## 1.5 Installation of Batteries

(Here is only the sketch, please in kind prevail)



- ① Open the back lid of the remote control.
- ② Install two 7#(AAA)1.5V batteries.  
Ensure the correct polarity of the batteries.
- ③ Cover the back lid.  
Please take out of the batteries from the remote control for long time of no use.

If the remote control doesn't work properly, please carry out the following checks.

- Check the TV is turned on.
- Check the polarity of the batteries are correct.
- Check the batteries are not drained.
- Check the power supply is normal or the power cord is correctly connected.
- Check there are no special fluorescent light or neon light around.

## 2. Basic Operation

### 2.1 Power ON/OFF(Optional)

- Connect the power cord to the **AC input**. Insert the power cord into the appropriate socket.
- Press the **Power switch** to switch on the TV, then press **Power** button to turn on the unit.
- Press the **Power switch** again to switch off the TV.

Note: After switch off the TV, please don't immediately re-open the power switch, should be delayed one minute more to re-open the power switch.

### 2.2 Setting of Standby Mode

- Press (  ) button to turn on the unit.
- Press (  ) button again to return the display to standby mode. The power indicator turns red.
- Be sure not to set your TV in standby mode for a long period of time.

### 2.3 Selection of Input Mode

This set has different signal source modes, you may continue to press the **Source** button to select a signal source.



---

When selecting the signal source, the screen will display the information.

### TV mode



 
When there is no signal from the selected source, the warning message will be Displayed as per illustration. Either change the channel in TV mode or press **Source** button to change **SOURCE**.



## 2.4 Menu Option Adjustment

After you have installed the batteries into the remote control, you will need to set some preferences on the LED TV, using the menu system.

- The buttons for menu option adjustment include: **Menu**, **▲**, **▼**, **◀**, **▶** **Enter** buttons.
- Press the **Menu** button to open the OSD Menu, then press **◀**, **▶** button to select the pages. the pages are displayed in the following sequence (circular display):



*Note: "CHANNEL" is only for TV .*

- ① Press the **Menu** button to display the menu system.
- ② Press **◀**, **▶** button to select the menu pages.
- ③ Press **▲**, **▼** button to select an item.
- ④ Press **◀**, **▶** button to selector adjust a setting.
- ⑤ If you do not make a selection within 10 seconds, the menu will close Automatically.
- ⑥ Press the **Menu** button to return or exit OSD menu.

---

## 2.5 Menu Functions

(All the initial setting of menu, please consult the actual object.  
User manual only detailedly describe how to operate the device)

### 2.5.1 CHANNEL Function

※ Adjustment of the CHANNEL

 
 
① Press the **Menu** button, and then press  
◀ or ▶ button to the "**CHANNEL**" item.

② Press ▲ or ▼ button to highlight the  
"Auto Tuning", "ATV Manual Tuning",  
"Programme Edit", then press **ENTER**  
button to change the setting.

③ Press the **Menu** button to return or exit.

※ In the "CHANNEL" menu, select "Auto  
Tuning " and then press **ENTER** button  
to auto search and store the channels.

※ In the "CHANNEL" menu, select "ATV  
Manual Tuning " and then press **ENTER**  
Button to change the setting.

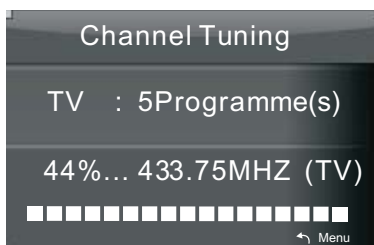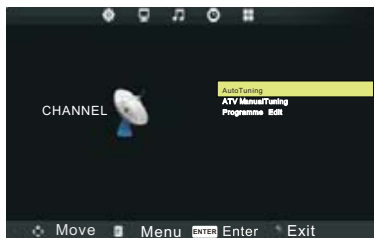

- **Current CH** Set the channel number
- **Color system** Select the color system PAL/SECAM/NTSC
- **Sound System** Select the sound system (DK/BG/M/N/I)
- **Fine-Tune** Adjust the frequency of the channel finely.
- **AFC** Automatic Fine tuning.
- **Search** Press ◀ to search down from the current frequency, and press ▶ to search up.



※ In the "CHANNEL" menu,select

"Program edit "and then press **ENTER**

button to change the setting.

- The four colored key is the shortcut key for programming the channel.
- First press ▲/▼ to highlight the channel you want to delete or rename or move or skip, then:
- Press the **Red** button to delete the channel.
- Press the **Green** button to enter the rename state, then press ◀/▶ to select the word you want to change, and ▲/▼ to select word.
- Press the **Yellow** button to set the channel to moving state. Then press ▲/▼ to move it to the position you want to put.
- Press the **Blue** button to skip the select channel.  
(Your TV set will skip the channel automatically when using CH+/- to view the channels.)
- **Fav** Add or Delete the channel to your favorite list.





## 2.5.2 PICTURE Function

  ※ Adjustment of the PICTURE.

- ① Press the **Menu** button, and then press ◀ or ▶ button to the "**PICTURE**" item.
- ② Press ▲ or ▼ button to highlight the "Picture Mode", "Color Temperature", "Noise Reduction" item and then press **ENTER** button to enter Sub-menu.
- ③ In Sub-menu Press ◀ or ▶ button to adjust different setting.
- ④ Press the **Menu** button to return or exit.

※ In the "PICTURE" menu,select "Picture Mode" and then press **ENTER** Button to change the setting.

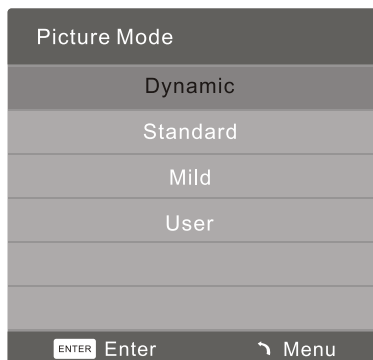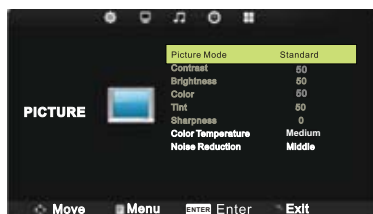


## Color Temperature

In the "PICTURE " menu,select " Color Temperature" and then press **ENTER** button to change the setting: "Cool", "Medium", "Warm".



## Noise Reduction

 
In the "PICTURE " menu,select "Noise Reduction" and then press **ENTER** button to change the setting: "Off", "Low", "Middle", "High".

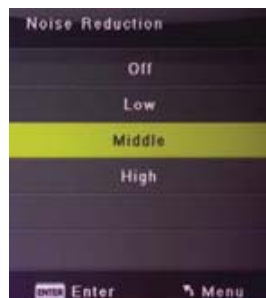

## 2.5.3 SOUND Function


※ Adjustment of the SOUND

 - ① Press the **Menu** button, and then press ◀ or ▶ button to the "**SOUND**" item.
- ② Press ▲ or ▼ button to highlight the "Sound Mode", "Balance" , "Surround " "Auto Volume" , then press **ENTER** button to enter Sub-menu.
- ③ In Sub-menu Press ◀ or ▶ button to adjust different setting.
- ④ Press the **Menu** button to return or exit.

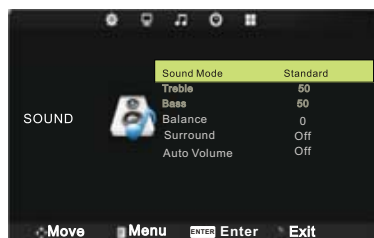

## Sound Mode

 
In the "SOUND " menu,select " Sound Mode" and then press ▲ or ▼ button to change the setting: "Standard", "Movie", "Music", "Sports", "User"

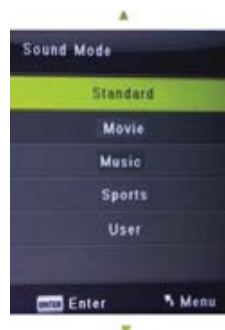

## 2.5.4 TIME Function

※ Adjustment of the TIME

 
- ① Press the Menu button, and then press ◀ or ▶ button to the **"TIME"** item.
- ② Press ▲ or ▼ button to highlight the "Sleep Timer", "Auto Sleep" or "OSD Timer" item and then press **ENTER** button to enter sub-menu.
- ③ In Sub-menu Press ▲ or ▼ button to adjust different setting.
- ④ Press the Menu button to return or exit.

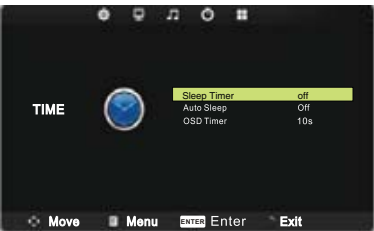

## 2.5.5 OPTION Function

※ Adjustment of the OPTION

 - ① Press the **Menu** button, and then press ◀ or ▶ button to the **"OPTION"** item.
- ② Press ▲ or ▼ button to highlight the "OSD Language", "Aspect Ratio", "Blue Screen", "Key Lock", "HDMI CEC", "Reset", item and then press **ENTER** button to enter Sub-menu.
- ③ In Sub-menu Press ◀ or ▶ button to Adjust different setting.
- ④ Press the **Menu** button to return or exit.

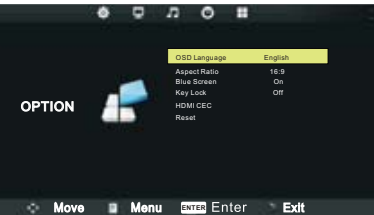


### OSD Language

In the "OPTION" menu, select "OSD Language" and then press **ENTER** button to change the setting.

### Aspect Ratio

 In the "OPTION" menu, select "Aspect Ratio" and then press **ENTER** button to change the setting.

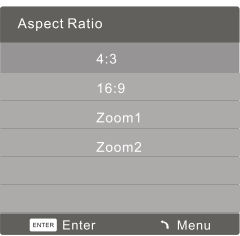

---

## 2.6 SCREEN MENU

Note: the Screen Menu is available in PC mode. Those items are set to adjust the pc screen.

Press ▲/▼ to highlight one of the following options, then press ENTER or ► to select it

 
**Auto Adjust** Automatically adjust Clock, Phase, H-Position, and V-Position settings.

**Horizontal Pos.** Shift the screen up or down.

**Vertical Pos.** Shift the screen left or right.

**Clock** Adjust the internal sampling clock rate.

**Phase** Adjust the internal signal phase.

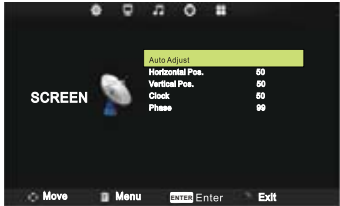

## 2.7 Multimedia

### 2.7.1 MEDIA Function

A. Support multimedia file:

| Multimedia data | Format                                                                        |
|-----------------|-------------------------------------------------------------------------------|
| Image           | JPEG; BMP; PNG                                                                |
| Music           | MP3                                                                           |
| Video           | MPEG-1(.DAT/.MPG)<br>MPEG-2(.MPG/.VOB)<br>MPEG-4(.AVI/.MP4)<br>Digital movies |
| TXT             | .txt                                                                          |

B. USB don't connect PC.

C. Compatible USB devices: The format is FAT or FAT32.

D. We cannot guarantee compatibility (operation and/or bus power) with all USB mass storage devices and assumes no responsibility for any loss of data that may occur when connected to this unit.

Please update formats for all file types (audio, photo, video)

 


---

## 2.7.2 USB Function


### ✕ Adjustment of the USB

- ① Press the SOURCE button, and then press ▲ or ▼ button to highlight the “MEDIA” item and then press ENTER button.
- ② Press ◀ or ▶ button to highlight the “PHOTO”, “MUSIC”, “MOVIE”, “TEXT” item and then press ENTER button.
- ③ Press the SOURCE button to return or exit.

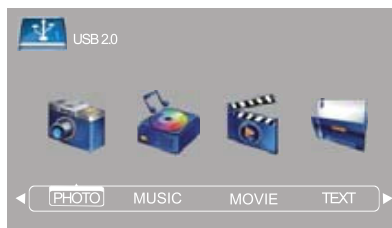


## 2.7.3 PHOTO

 - A. Press ◀ or ▶ to select folder or file, press **ENTER** button to enter next folder, press **RECALL** to return previous folder.
- B. Press ◀ or ▶ to select the **PHOTO** that you want, press **ENTER** button to select playlist than press ▶| button to play.
- C. Press **Display** button to the media item.
- D. Press ◀ or ▶ button to highlight the media and then press **ENTER** button.



 Play/pause Previous, Next, Stop, Repeat ALL, Music Off, Playlist, Info. .




Rotate, Rotate, Zoom In, Zoom Out, Move View, Music Source.

## 2.7.4 MUSIC

 - A. Press ◀ or ▶ to select folder or file, press **ENTER** button to enter next folder, press **RECALL** to return previous folder.
- B. Press ◀ or ▶ to select the **MUSIC** that you want, press **ENTER** button to select playlist than press ▶| button to play.
- C. Press **Display** button to the media item.
- D. Press ◀ or ▶ button to highlight the media and then press **ENTER** button




Play/pause Fast Backward, Fast Forward, Previous, Next, Stop, Repeat ALL, MUTE.

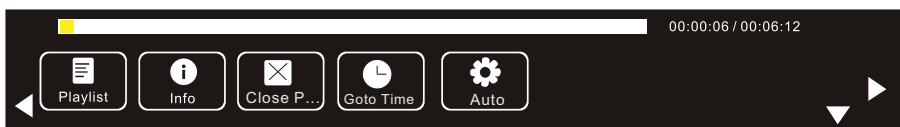


Playlist, Info, Close Panel, Goto Time, Auto.

## 2.7.5 MOVIE

 - A. Press ◀ or ▶ to select folder or file, press **ENTER** button to enter next folder , press **RECALL** to return previous folder.
- B. Press ◀ or ▶ to select the **MOVIE** that you want, press **ENTER** button to select playlist than press ▶▶ button to play.
- C. Press Display button to the media item.
- D. Press ◀ or ▶ button to highlight the media and than press **ENTER** button

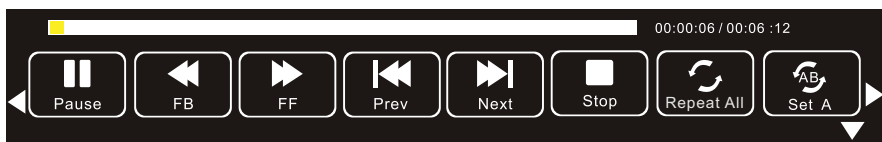

 Play/pause, Fast Backward, Fast Forward, Previous, Next, Stop, Repeat ALL, Set A/B

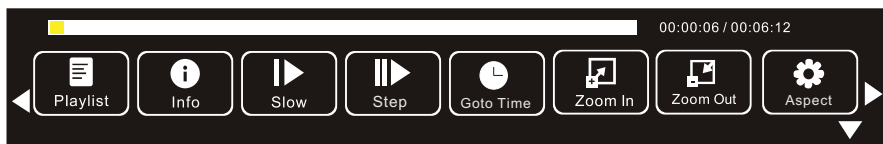

Playlist, Info , Slow Fw, Step Fw, Goto Time, Zoom In, Zoom Out, Aspect Ratio



Auto, Move View.

---

## 2.7.6 TEXT

- A. Press ◀ or ▶ to select folder or file, press **ENTER** button to enter next folder, press **RECALL** to return previous folder.
- B. Press ◀ or ▶ to select the **TEXT** that you want, press **ENTER** button to select playlist than press ▶ button to play.
- C. Press **Display** button to the media item.
- D. Press ◀ or ▶ button to highlight the media and then press **ENTER** button



Previous Page, Next Page, Previous, Next, Stop, Music Off, Playlist, Info



Music Source, Auto.

### 3. Technical Specification

|                                  |                              |     |
|----------------------------------|------------------------------|-----|
| Product Model                    | S32D20                       |     |
| Screen Size                      | 32" diagonal                 |     |
| Aspect Ratio                     | 16:9                         |     |
| Power Supply                     | AC 100-240V~,50/60Hz         |     |
| Power Consumption                | 60W                          |     |
| TV System                        | PAL B/G D/K I, SECAM B/G D/K |     |
| Audio Output Power<br>(Internal) | 8Wx2                         |     |
| Input Terminal                   | Antenna Input                | x 1 |
|                                  | USB Input                    | x 2 |
|                                  | HDMI Input                   | x 2 |
|                                  | VGA Input                    | x 1 |
|                                  | PC AUDIO Input               | x 1 |
|                                  | Audio Input (L/R)            | x 1 |
|                                  | Video Input                  | x 1 |
|                                  | YPbPr Input                  | NO  |
|                                  | RJ45 Input                   | NO  |
|                                  | CI card In                   | NO  |
|                                  | SCART In/Output              | NO  |
|                                  | DC In (12V)                  | NO  |
| Output Terminal                  | Earphone                     | x 1 |
|                                  | Audio Line Out(L/R)          | NO  |
|                                  | Video Output                 | NO  |
|                                  | Optical                      | NO  |
|                                  | Coaxial out                  | x 1 |
| Working Temperature              | 0°C~40°C                     |     |
| Working Humidity                 | 20% ~ 80% Non-condensing     |     |

*Note: the specification shown above may change without notice for quality improvement.*

---

## 4. Supported Signal Modes

### A.VGA Mode

| Resolution | Horizontal Frequency (Khz) | Vertical Frequency (Hz) | Memo               |
|------------|----------------------------|-------------------------|--------------------|
| 640 x 480  | 31.50                      | 60.00                   |                    |
| 800 x 600  | 35.16                      | 56.25                   |                    |
|            | 37.90                      | 60.00                   |                    |
| 1024 x 768 | 48.40                      | 60.00                   |                    |
| 1366x 768  | 47.85                      | 60.00                   |                    |
| 1920x 1080 | 67.50                      | 60.00                   | Full HD panel only |

*Note: You' re suggested to use the VGA connecting cord of not more than 5 meters to ensure the appropriate picture quality.*

### B.HDMI Mode

| Resolution       | Horizontal Frequency (Khz) | Vertical Frequency (Hz) |
|------------------|----------------------------|-------------------------|
| 480p             | 31.468                     | 59.94                   |
| 576p             | 31.25                      | 50.00                   |
| 720P             | 45.00                      | 60.00                   |
| 1080i            | 33.75                      | 60.00                   |
| 1080P(1920x1080) | 67.50                      | 60.00                   |

*-When the signal received by the Display exceeds the allowed range, a warning message will appear on the screen.*

*-You can confirm the input signal format onscreen.*

---

 
 
 
 
 
## 5. Simple Troubleshooting

If the display fails or the performance changes dramatically, check the display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

| Symptom                                                     | Solution                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power cannot be turned on.(Power indicator does not light.) | -Check that both ends of the power cable are plugged into the socket appropriately and the wall socket is operational                                                                                                                                                                                                |
| No Input Signal message appears.                            | -Check that the signal line is connected properly.<br>-Check that the power of the relevant peripherals is turned on.<br>-Check that the Input option that has been selected matches with the input signal.                                                                                                          |
| The remote control does not function properly.              | -Check the batteries are not drained.(Use new batteries.)<br>-Check that the remote control is within the operating range.<br>-Check that the remote control is pointed to the remote control window on the display.<br>-Check that there are no obstacles between the remote control and the remote control window. |
| Flashing spots or stripes appear on the screen.             | -Check that there are no emission (Car, HV cable or Neon lamp) or other possible interference sources.                                                                                                                                                                                                               |
| Image colour or quality deteriorates.                       | -Check that all the video settings are adjusted appropriately, such as brightness, contrast, colour etc.<br>-For more information about video settings, refer to OSD Functions in Chapter 2.                                                                                                                         |
| Screen position and size are incorrect.                     | -Check that the screen position and size is adjusted appropriately.                                                                                                                                                                                                                                                  |
| Image or colour is incorrect.                               | -Check that the signal line is connected properly.<br>-When connecting to a PC, you can change the resolution of the PC to acquire the correct image. The discrepancy of the PC output signal may affect the display of the image.                                                                                   |
| Display warning message.                                    | -Check that the input signal line is properly fixed.<br>-Select the correct input signal.<br>-For more information, refer to Supported Signal Modes in Chapter 4.                                                                                                                                                    |

# STAND INSTALLATION

## Stand Installation

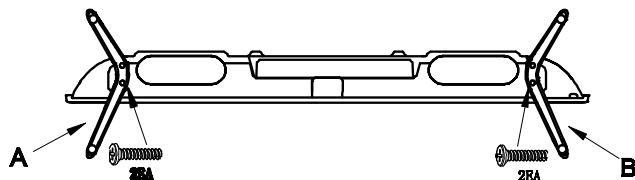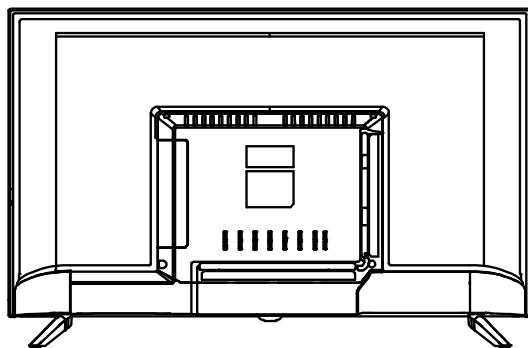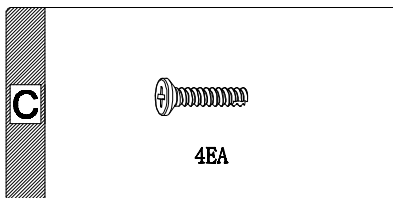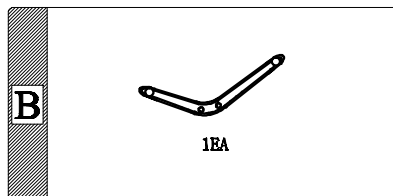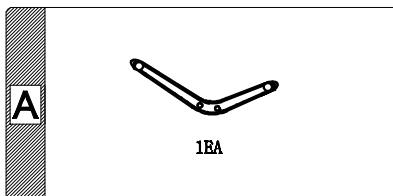



## UPUTSTVO ZA UPOTREBU



**LED TELEVIZORI**

Model: S32D20

Molimo Vas da detaljno proučite ovo uputstvo pre  
upotrebe televizora i da ga čuvate radi kasnije upotrebe





**UPOZORENJE:**  
KAKO BI SMANJILI RIZIK OD STRUJNOG UDARA NE UKLANJAJTE  
POKLOPAC (ILI ZADNJI DEO). UNUTAR UREĐAJA NEMA DELOVA  
KOJE SAMI MOŽETE ZAMENITI. OBRATITE SE KVALIFIKOVANIM  
SERVISERIMA.



Simbol munje u jednakokraničnom trouglu upozorava korisnika na neizolovane opasne delove pod naponom unutar uređaja, koji može biti dovoljne jačine da predstavlja rizik od električnog udara.



Znak uzvika u jednakokraničnom trouglu obaveštava korisnika na postojanje važnih operacionih instrukcija kao i instrukcija za održavanje u literaturi koja prati proizvod.

## INFORMACIJE O PROPISIMA:

Ova oprema stvara, koristi i zrači radiofrekvenciju i ako nije instalirana i korišćena u skladu sa uputstvom, može izazvati štetne smetnje u radio komunikaciji. Ipak, ne postoji garancija da se smetnje neće pojaviti prilikom određenih instalacija. Ako ova oprema ipak izazove štetne smetnje pri radio ili TV prijemu signala, što se može utvrditi tako što se oprema isključi pa ponovo uključi, korisnik se savetuje da ukloni smetnje pomoću jedne ili više ponuđenih mera:

- Premestite prijemnu antenu.
- Povećajte razdaljinu između opreme i prijemnika.
- Opremu i prijemnik uključite u različite strujne utičnice.
- Posavetujte se sa prodavcem ili sa iskusnim radio/TV serviserom.

Sve izmene ili modifikacije koje nisu izričito odobrene od strane koja je ovlašćena da izda saglasnost, mogu da ponište korisnikovo punomoćje da koristi aparat.

## OPREZ:

NE pokušavajte da modifikujete ovaj proizvod u bilo kom smislu bez pismenog odobrenja prodavca. Neovlašćena modifikacija proizvoda može da poništi korisnikovo punomoćje da koristi aparat.

Nije preporučljivo da određena statična slika bude stalno prikazana na ekranu duže vreme ili da prikazuju ekstremno svetle slike.

Ilustracije u ovom uputstvu su obezbeđene samo kao preporuke i mogu se razlikovati od stvarnog izgleda proizvoda. Dizajn i specifikacije proizvoda mogu se promeniti bez prethodnog upozorenja.

### UPOZORENJE:

Kako bi umanjili rizik od požara i strujnog udara NE izlažite ovaj proizvod kiši ili vlazi. Ne koristite ovaj proizvod u tropskoj klimi.

Ventilacija ne bi trebala da bude blokirana pokrivanjem ventilacionih otvora sa predmetima kao što su novine, krpe, zavese i slično.

Proizvod ne bi trebalo da bude izložen kapljanju ili prskanju. Takođe ni jedan predmet napunjen tečnošću, kao što je na primer vaza za cveće, ne bi trebalo da bude stavljen na njega.

Treba obratiti pažnju na ekološke aspekte prilikom odlaganja baterija. Ne bacajte baterije u kantu za otpatke. Molimo vas da kontaktirate vašeg prodavca kako bi očuvali životnu okolinu.

Održavajte minimalnu razdaljinu (5cm) oko proizvoda kako bi aparat imao dovoljnu ventilaciju i hlađenje.

Na proizvod ne stavljati izvore otvorenog plamena.

Da bi sprečili širenje vatre, držite sveće i ostale izvore otvorenog plamena dalje od ovog proizvoda u svakom trenutku.

Moguće je zastoj rada proizvoda prilikom elektrostatičkog pražnjenja. Može se ponovo pokrenuti ručnim gašenjem pa ponovnim paljenjem.

### OPREZ

Povezivanje na strujnu mrežu.

Preporučljivo je da se proizvod uključi u samostalnu strujnu utičnicu, odnosno na strujni kabl na koji nije priključen nijedan drugi potrošač ili produžni kabl.

Ne preopterećujte strujne utičnice. Preopterećene, labave ili oštećene strujne utičnice i produžni kablovi, spaljeni strujni kablovi sa oštećenom izolacijom su opasni. Bilo koji od ovih uslova može dovesti do strujnog udara ili požara. Periodično proveravajte kablove vašeg proizvoda i ako primetite oštećenje ili propadanje istih, isključite aparat i prestanite da ga koristite sve dok ovlašćeni serviser ne otkloni kvar. Štitite naponski kabl od fizičkog i mehaničkog oštećenja, kao na primer od uvrtanja, prignječenja, priklještenja i gaženja po njemu. Obratite posebnu pažnju na utičnice, utikače naročito u delu gde kablovi izlaze iz aparata.

Mrežni (naponski) utikač se koristi i kao deo za isključivanje aparata i tako isključen aparat je spreman za ponovno uključivanje.

 
### VAŽNE INFORMACIJE

Ako TV nije postavljen na dovoljno stabilnu podlogu može predstavljati opasnost ako padne. Mnoge ozlede, naročito kod dece, mogu biti izbegnute ako primenite sledeće jednostavne mere:


- Koristite kabinete i stalke preporučene od strane proizvođača.
- Koristite nameštaj koji može da izdrži TV.
- Postarajte se na TV ne visi sa iverice nameštaja.
- Ne postavljajte TV u visoki nameštaj (kao što su na primer šifonjeri i ormani za knjige), a da ge prethodno niste sigurno pričvrstili za odgovarajuću podlogu.
- Ne postavljajte tekstil ili neki drugi materijal između TV-a i nameštaja na kom se on nalazi.
- Podučite decu o opasnostima kod pokušaja da dohvate TV ili njegove komande.

VAŽNE MERE OPREZA:


1. Pročitajte ovo uputstvo.
2. Sačuvajte ovo uputstvo.
3. Poslušajte sva upozorenja.
4. Pratite sve instrukcije.

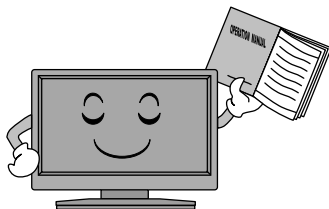

 
7. Ne blokirajte bilo koji ventilacioni otvor. Montirajte TV u skladu sa uputstvom proizvođača.

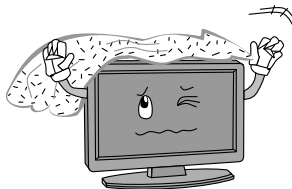

 
5. Ne koristiti proizvod u blizini vode.

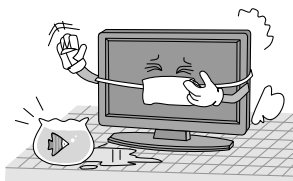

 8. Ne postavljati u blizini izvora toplote kao što su radijatori, peći ili drugi objekti (uključujući i pojačavače) koji emituju toplotu.

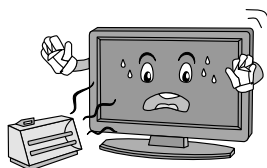

 6. Brisati samo sa suvom krpom.

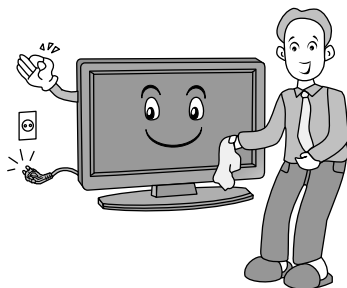

9. Utikač aparata priključite u odgovarajuću utičnicu, odnosno voditi računa da li je utikač sa polarizovanim viljuškama ili sa uzemljenjem pa shodno tome odabrati i utičnicu.

## Mere opreza:

10. Čuvajte mrežni kabl od gaženja ili od priklještenja naročito kod utikača, razvodne kutije i izlaza iz aparata.

 


11. Koristite samo one dodatke navedene od strane proizvođača.


12. Koristiti samo sa kolicima, stalkom, tronožcem, podupiračem ili stolom naznačenim od strane proizvođača ili sa onim dobijenim uz aparat. Kada koristite kolica obratite pažnju kada ih pomerate da bi izbegli ozledu ako dođe do prevrtanja.



13. Isključite iz struje ovaj aparat za vreme oluja sa munjama ili ako ga duže vreme ne koristite.

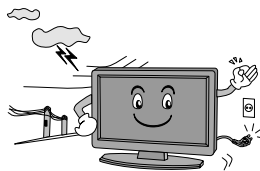

 14. Prepustite servisiranje kvalifikovanim osobama. Servis je potreban kad je aparat oštećen u bilo kom smislu, kao na primer oštećenje utikača ili naponskog kabla, ako je po njemu prosuta tečnost ili je neki predmet upao u njega, ako je bio izložen kiši ili vlazi, ako ne radi normalno ili ako je ispušten.

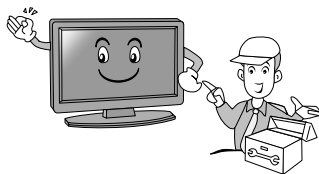

## PRILIKOM ODLAGANJA (BACANJA):

- Fluorescentna lampa koja se koristi u ovom proizvodu sadrži male količine žive.
- Ne bacajte ovaj proizvod sa ostalim kućnim smećem.
- Odlaganje (bacanje) ovog proizvoda mora da se uradi u skladu sa regulativama zemlje u kojoj živite.

## OBRATITI PAŽNJU:

- Ako je aparat hladan na dodir, može doći do malog treperenja prilikom paljenja. Ovo je normalno, nema ničeg nepravilnog u radu vašeg TV-a.
- Nekoliko minuta mogu biti vidljive tačkaste nepravilnosti na ekranu, pojavljujući se kao sićušne crvene, zelene ili plave tačke. Ova pojava nema štetan uticaj na performanse vašeg TV-a.
- Izbegavajte dodirivanje ili držanje vašeg prsta duže vreme na ekranu. Ako to uradite može doći do privremene iskrivljenosti vašeg ekrana.

## Početak:

 
### Upotreba daljinskog upravljača:

Kada koristite daljinski upravljač usmerite ga ka senzoru na TV-u. Ako postoji predmet između daljinskog i senzora, aparat možda neće reagovati.

- Uperite daljinski upravljač ka senzoru na TV-u.
- Kada koristite TV u veoma osetljivoj prostoriji infra crveni senzor možda neće raditi kako treba.
- Preporučena daljina za nesmetan rad daljinskog upravljača je oko 7 metara.

### Postavljanje baterija u daljinski upravljač:

1. Otvorite poklopac na zadnjem delu daljinskog upravljača.
2. Postavite dve baterije veličine AAA. Budite sigurni da ste ih postavili pravilno tako da + i - baterija odgovaraju dijagramu unutar upravljača.
3. Vratite poklopac.

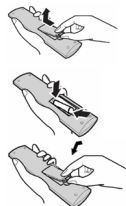

### Zamena baterija:

Potrebno je da postavite baterije u daljinski upravljač tako što ćete pratiti sledeće instrukcije. Kada baterije oslabe operativna razdaljina daljinskog upravljača će drastično opasti i moraće ih zameniti.

#### **Preporuka kako koristiti baterije:**

Korišćenjem pogrešnih vrsta baterija može dovesti do hemijskog curenja ili eksplozije. Molimo vas obratite pažnju na sledeće:

- Budite sigurni da ste polove + i - baterija postavili kako je prikazano na dijagramu u odeljku za baterije daljinskog upravljača.
- Različite vrste baterije imaju drugačije karakteristike. Ne mešajte različite vrste baterija.
- Ne mešajte nove i stare baterije. Ako to uradite smanjujete životni vek baterije i može doći do curenja iste.
- Promenite baterije istog trenutka kada prestanu da rade.
- Hemikalije koje cure iz baterije mogu izazvati iritaciju kože. Ako hemikalije počnu da cure iz baterije odmah ih obrišite sa suvom krpom.
- Baterije mogu da imaju kraći životni vek zbog stanja prilikom skladištenja. Izvadite baterije kad znate da nećete koristiti daljinski upravljač duže vreme.
- Baterije ne izlažite prekomernoj toploti kao što su sunčeva svetlost, vatra ili slično.

#### **Oprez:**

- Može doći do eksplozije ako baterije nisu zamenjene pravilno.
- Zamenite baterije sa istom ili sličnom vrstom baterija.

### Povezivanje kablova:

---

Molimo vas da pročitate pažljivo važne stavke u delu "Održavanje i bezbednost" pre povezivanja i korišćenja proizvoda.

1. Izvadite TV iz pakovanja i stavite ga na ravnu podlogu.

Obratiti pažnju:

- Kada uključujete ili isključujete TV, kompjuter ili drugi uređaj budite sigurni da je neizmenična struja već isključena. Kada isključujete naponski ili signalni kabl, držite ga za utikač (izolovani deo), a ne za telo kabl.

2. RF izlazni terminal može se povezati sa RF ulazom TV-a.

3. AV terminal DVD-a može se povezati sa AV ulazom TV-a putem AV kabl.

4. Povežite jedan kraj VGA kabl sa VGA portom kompjutera, a drugi kraj sa VGA portom TV-a, a zatim zategnite šrafove u smeru okretanja kazaljki sata na priključcima na oba kraja kabl.

Obratiti pažnju:

Pri priključivanju 15-to pinskog VGA kabl vodite računa da to ne uradite previše jako da ne bi došlo do iskrivljivanja pinova.

5. Priključite jedan kraj HDMI kabl sa HDMI izlazom nekog uređaja, a drugi sa HDMI ulazom TV-a.

Obratiti pažnju:

Pri priključivanju HDMI kabl vodite računa da to ne uradite previše jako da ne bi došlo do iskrivljivanja pinova.

6. Proverite da su odgovarajući AV kablovi spojeni sa odgovarajućim AV ulazima na TV-u.

7. Povežite naponski kabl sa izvorom struje od 100-240V.

---

Obratiti pažnju:

-Opseg izvora napajanja TV-a je 100-240V, 50/60Hz. Ne priključivati ga na izvor napajanja koji nije u tom opsegu.

-Molimo vas da držite izolovani deo utikača naponskog kabl kada ga isključujete i nemojte da dodirujete direktno njegove metalne delove.

---

## Osnovne operacije:

### Vodič za brz start

---

-Povezivanje:

1. Priključite napajanje i antenu.
2. Pritisnite dugme  na daljinskom upravljaču da uključite TV.

-Početno podešavanje:

Kada je TV uključen po prvi put pojaviće se niz uputstava na ekranu koji će vam pomoći u podešavanju osnovnih parametara.

1. Izaberite željeni jezik.
- Pritiskajte dugmiće ///, a zatim dugme OK.

2. Izaberite odgovarajuću zemlju.

Pritiskajte dugmiće ///, a zatim dugme OK da bi izabrali zemlju posle čega će početi traženje kanala.

### Upaliti/ ugasiti TV

---

-Upaliti TV

Priključite kabl za napajanje. U tom trenutku TV će preći u stanje čekanja (standby).

Pritisnite dugme  na daljinskom upravljaču kako bi iz stanja pripravnosti upalili TV.

-Ugasiti TV

Pritisnite dugme  na daljinskom upravljaču kako bi ga prebacili u stanje pripravnosti (standby).

Ne ostavljajte vaš TV u stanju čekanja duže vreme. Najbolje je da TV isključite iz napajanja i da ga odvojite od kabla za antenu.

-Nema signala

Ako nema ulaznog signala pojaviće se poruka koja vas na to upozorava. U TV/DTV modu ako nema signala 15 minuta, TV će se sam ugaziti. U PC modu TV će se sam ugaziti ako ulaznog signala nema 5 minuta. Kada spojite VGA kabl, TV će se sam upaliti.

### Biranje programa

---

- Korišćenje CH+/CH- dugmića na TV u i na daljinskom upravljaču

Pritisnite dugme CH+ da bi prešli na viši kanal.

Pritisnite dugme CH- da bi prešli na niži kanal.

-Korišćenje dugmića sa brojevima (0-9)

Birajte željeni kanal pritiskanjem odgovarajućih brojeva od 0 do 9 ( u TV i DTV modu)

-Korišćenje dugmića -/--

Možete da izaberete deo broja kanala pritiskanjem dugmeta -/--

### Podešavanje zvuka

---

-Pritisnite dugme VOL +/- da podesite jačinu zvuka

-Ako želite da isključite zvuk pritisnite dugme 

-Ako želite da ponovo uključite zvuk pritisnite dugme  ili VOL +/-

### Promena izvora ulaznog signala

---

Možete da birate izvor ulaznog signala tako što ćete pritisnuti dugme INPUT na daljinskom upravljaču.

Zatim pomoću dugmića / se krećite između datih izvora ulaznih signala i pritisnite dugme OK da potvrdite izbor.

## Daljinski upravljač

Dugmići daljinskog upravljača izgledaju kao što je prikazano:



### BELEŠKA:

● Sve slike u ovom priručniku su primeri, samo za referencu, stvarni proizvod se može razlikovati od slika.

● Tasteri koji ovde nisu pomenuti se ne koriste.

### Definicija tastera na daljinskom upravljaču

1. **STANDBY:** Udjite ili izadjite iz stanja pripravnosti.
2. **MUTE:** Isključivanje ili uključivanje zvuka.
3. **NUMBER BUTTONS:** Koristite za izbor kanala.
4. **-/- :** Promenite cifre kalana koje želite da unesete.
5. **↺ :** Povratak na posednji gledani program.
6. **P.MODE:** Pritisnite da biste prešli na raspoloživi režim video slike.
7. **S.MODE:** Pritisnite za kretanje kroz različite postavke zvuka.
8. **MENU:** Pritisnite za prikaz/nestajanje menija na ekranu ili za prekid nekih operacija.
9. **SLEEP:** Podestite za automatsko isključivanje TV.
10. **INPUT:** Izaberite izvor signala.
11. **AUDIO:** Prelazite izmedju: NICAM DUAL /NICAM DUAL /NICAM DUAL+ /MONO I prebacite Audio jezik u DTV režimu.
12. **OK:** Izaberite ili potvrdite MENU.
13. **▲/▼/◀/▶ :** Izaberite pravac
14. **MENI** Pritisni da bi prikazao glavni meni/da bi nestao prikaz menija/da bi završili neke operacije.
15. **EXIT:** Zatvorite trenutni prikaz.
16. **VOL+/VOL-:** Povećajte / smanjite jačinu zvuka.
17. **CH+/CH-:** Dodjite do sledećeg / predhodnog kanala.
18. **ASPECT:** Podesite prikazani odnos strane ekrana.
19. **INFO:** Prikaži informacije o programu.
20. **LIST :** Lista kanala.
21. **COLOR BUTTONS:** Crveno/Zeleno/Žuto/Plavo tasteri za navigaciju.
  - ◀◀: Brzo vraćanje (u MEDIA režimu)
  - ▶▶: Ubzraj(u MEDIA režimu)
  - ◀◀: Predhodna(u MEDIA režimu)
  - ▶▶: Sledeći (u MEDIA režimu)
  - ▶|: Pusti / Pauziraj (u MEDIA režimu)
  - : Zaustavi (u MEDIA režimu)
22. **FAV:** Prikažite omiljeni program.
23. **MIX:** Grafička funkcija
24. **TEXT:** Udjite u Teletekst, ponovo pritisnite za MIKS režim, ponovo pritisnite taster da biste izasli
25. **HOLD:** Držite stranicu teleteksta na ekranu, ponovo pritisnite da biste je zatvorili.
26. **INDEX:**Idite na indeks stranicu/unestite snimljenu listu (u PVR režimu).
27. **REVEAL:** Otkrijte skrivene informacije nekih stranica teleteksta.
28. **SIZE:**Promenite veličinu ekrana teletska u režimu prikaza.



# STELLA LED TV

---

## 1.5 Instalacija baterija

(Molim vas da prevladate, ovo je samo skica.)



- 1 Zadnji poklopac daljinskog upravljača treba da bude otvoren.
- 2 Stavite dve 7# (AAA) 1.5V baterije u sistem.  
Uverite se da su baterije pravilno polarizovane.
- 3 Pokrijte zadnji poklopac.

Izvadite baterije iz daljinskog upravljača ako ga neko vreme nije koristio.

Izvršite sledeće provere ako daljinski upravljač ne funkcioniše ispravno.

- Proverite da li je TV u programu.
- Proverite da li je polaritet baterija odgovarajući.
- Proverite da li baterije nisu iscrpljene.
- Uverite se da je napajanje u ispravnom stanju ili da je kabl za napajanje pravilno povezan.
- Uverite se da u blizini nema neobičnih neonskih ili fluorescentnih svetla.

## 2 Osnovna operacija

### 2.1 Uključivanje/isključivanje (opciono)

- Povežite kabl za napajanje sa **AC ulazni**. Utaknite kabl za napajanje u odgovarajuću utičnicu.
- Pritisnite **Prekidač** da uključite TV, zatim pritisnite **Napajanje** dugme za uključivanje jedinice.
- Pritisnite **Prekidač** ponovo da isključite TV.

Beleška: Nemojte odmah ponovo da otvarate prekidač za napajanje nakon što isključite TV; umesto toga, sačekajte jedan minut pre nego što ponovo otvorite prekidač za napajanje.

### 2.2 Podešavanje režima pripravnosti

- Pritisnite (U) dugme da biste uključili jedinicu.
- Pritisnite (U) dugme ponovo da vratite ekran u režim pripravnosti. Indikator napajanja svetli crveno.
- Uverite se da vaš TV nije ostavljen u režimu pripravnosti duži vremenski period.

 
### 2.3 Izbor režima unosa

Ovaj set sadrži više modova izvora signala; pritisnite dugme **Source** više puta da biste izabrali izvor signala.

# STELLA LED TV

---

Kada izaberete izvor signala, informacije će biti prikazane na ekranu.




Poruka upozorenja će se pojaviti kao što je prikazano kada nema signala sa izabranog izvora. Da biste promenili izvor, promenite kanal u TV režimu ili dodirnite dugme **Source**.



## 2.4 Podešavanje opcija menija

 Morate koristiti sistem menija na LED TV-u da biste podesili neke izbore nakon što stavite baterije u daljinski upravljač.

- Sledeći tasteri se koriste za promenu opcija menija: **Menu**, ▲, ▼, ◀, ▶ **Enter** dugmad.
- Pritisnite **Menu** dugme za otvaranje menija na ekranu, a zatim pritisnite ◀, ▶ dugme za izbor stranica. Prikazuje se sledeći niz stranica (kružni prikaz):



*Beleška: "KANAL" je samo za TV.*

- 1 Pritisnite **Menu** dugme za prikaz sistema menija.
- 2 Pritisnite ◀, ▶ dugme za izbor stranica menija.
- 3 Pritisnite ▲, ▼ dugme da izaberete stavku.
- 4 Pritisnite ◀, ▶ dugme da izaberete ili prilagodite podešavanje.
- 5 Meni će se automatski odbaciti nakon 10 sekundi ako ništa ne izaberete.
- 6 Pritisnite **Menu** dugme za povratak ili izlazak iz menija na ekranu.

# STELLA LED TV

## 2.5 Meni Funkcije

(Za sva početna podešavanja menija, pogledajte stvarni objekat.

Samo uputstvo za upotrebu pruža detaljno objašnjenje kako da koristite uređaj.)

### 2.5.1 KANAL Funkcije

 
 
#### ※Prilagodba KANALA

1. Pritisnite **Menu** dugme, a zatim pritisnite ◀ ili ▶ dugme na stavku "**KANAL**".
2. Pritisnite ▲ ili ▼ dugme da označite "Automatsko Štimovanje", "ATV Ručno štimovanje", "Uređivanje programi", a zatim pritisnite dugme **ENTER** da promenite postavku.
3. Da biste se vratili ili izašli, pritisnite dugme **Menu**.

※ Da biste automatski pretražili i sačuvali kanale, izaberite "Automatsko štimovanje" u meniju "KANAL", a zatim pritisnite dugme **ENTER**.

※ Izaberite "ATV Ručno štimovanje" iz "KANAL" menija, a zatim pritisnite dugme **ENTER** da biste izmenili postavku.


- **Trenutni CH** Postavite broj kanala
- **Boja sistem** Izaberite boja sistem PAL/SECAM/NTSC
- **Zvučni sistem** Izaberite zvučni sistem (DK/BG/M/N/I)
- **Fino štimovanje** Podesite frekvenciju kanala na preciznu vrednost.
- **AFC** Automatsko fino štimovanje.
- **Pretraga** Pritisnite ◀ da tražite nadole od trenutne frekvencije, pa pritisnite ▶ tražiti gore.

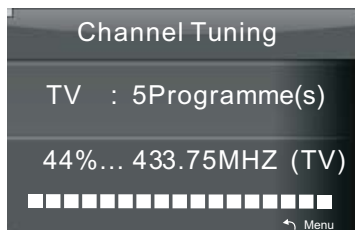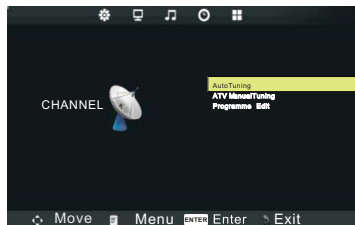

# STELLA LED TV

※ Izaberite "Uređivanje programi" iz "KANAL" menija, a zatim pritisnite dugme **ENTER** da biste izmenili postavku.

 - Taster za prečicu za programiranje kanala je taster sa četiri boje.
- Prvo pritisnite ▲/▼ da biste istakli kanal koji želite da izbrisete ili preimenujete, premestite ili preskočite, zatim:
- Pritisnite **Red** dugme da obrišete kanal.
- Pritisnite **Green** dugme za ulazak u stanje preimenovanja, a zatim pritisnite ◀/▶ da biste izabrali reč koju želite da promenite, i ▲/▼ da biste izabrali reč.
- Pritisnite **Yellow** dugme za postavljanje kanala u pokretno stanje. Zatim pritisnite ▲/▼ da ga pomerite na poziciju koju želite da postavite.
- Pritisnite **Blue** dugme da biste preskočili izabrani kanal.  
(Kada koristite CH+/- za gledanje kanala, vaš TV će automatski preskočiti kanal.)
- **Fav** Dodajte ili izbrisite kanal na svoju listu favorita.


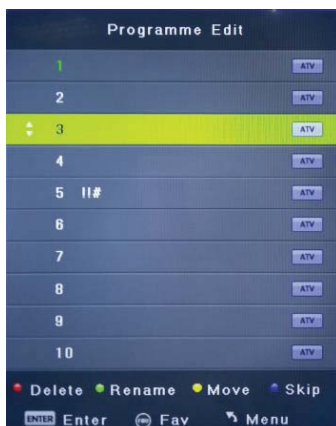


## 2.5.2 SLIKA Funkcije

※Prilagodba SLIKA.

1. Pritisnite **Menu** dugme, a zatim pritisnite ◀ ili ▶ dugme na stavku **"SLIKA"**.
2. Pritisnite ▲ ili ▼ dugme da biste istakli stavku "Režim slike", "Temperatura boje", "Smanjenje šuma", a zatim pritisnite dugme **ENTER** da uđete u podmeni.
3. U podmeniju, pritisnite ◀ ili ▶ dugme za podešavanje različitih podešavanja.
4. Da biste se vratili ili izašli, pritisnite dugme **Menu**.

  ※ Izaberite "Režim slike" iz "SLIKA" menija, a zatim pritisnite dugme **ENTER** da biste izmenili postavku.

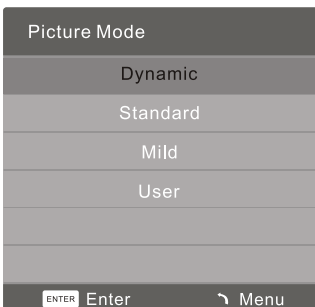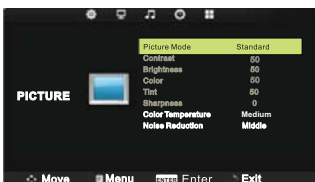

# STELLA LED TV

## Temperatura boje

Izaberite "Temperatura boje" iz "SLIKA" menija, a zatim pritisnite dugme **ENTER** da biste izmenili postavku: "Hladno", "Srednje", "Toplo".

## Smanjenje buke

Izaberite "Smanjenje buke" iz "SLIKA" menija, a zatim pritisnite dugme **ENTER** da biste izmenili postavku: "Isključeno", "Nisko", "Srednja", "Visoka".

 
 
 
## 2.5.3 ZVUK Funkcije

### ※Prilagodba ZVUK

1. Pritisnite **Menu** dugme, a zatim pritisnite ◀ ili ▶ dugme na stavku **"ZVUK"**.
2. Pritisnite ▲ ili ▼ dugme za isticanje "Režim zvuka", "Ravnoteža", "Okruziti" "Automatska jačina zvuka", a zatim pritisnite dugme **ENTER** da uđete u podmeni.
3. U podmeniju, pritisnite ◀ ili ▶ dugme za podešavanje različitih podešavanja.
4. Da biste se vratili ili izašli, pritisnite dugme **Menu**.

## Režim zvuka

Izaberite "Režim zvuka" iz "ZVUK" menija, a zatim pritisnite dugme ▲ ili ▼ dugme da biste izmenili postavku: "Standardno", "Film", "Muzika", "Sport", "Korisnik"

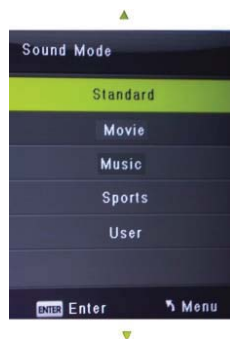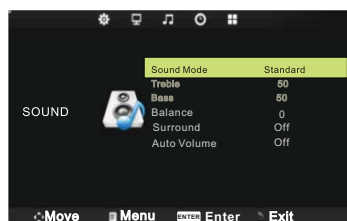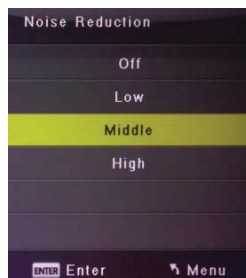


# STELLA LED TV

## 2.5.4 VREME Funkcije

### ※Prilagodba VREME

 
1. Pritisnite Menu dugme, a zatim pritisnite ◀ ili ▶ dugme na stavku "**VREME**".
2. Pritisnite ▲ ili ▼ dugme za isticanje stavke "Spavaj Tajmer", "Automatsko Spavanje" ili "OSD tajmer", a zatim pritisnite dugme **ENTER** da uđete u podmeni.
3. U podmeniju, pritisnite ▲ ili ▼ dugme za podešavanje različitih podešavanja.
4. Da biste se vratili ili izašli, pritisnite dugme **Menu**.

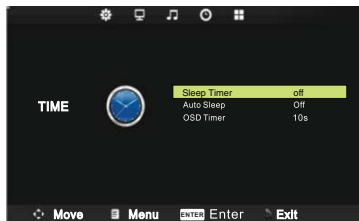

## 2.5.5 OPCIJA Funkcije

### ※Prilagodba OPCIJA

 1. Pritisnite **Menu** dugme, a zatim pritisnite ◀ ili ▶ dugme na stavku "**OPCIJA**".
2. Pritisnite ▲ ili ▼ dugme da biste istakli stavku "OSD jezik", "Proporcija širine i visine", "Plavi ekran", "Zaključavanje tastera", "HDMI CEC", "Resetovanje", a zatim pritisnite dugme **ENTER** da biste ušli u podmeni.
3. U podmeniju, pritisnite ◀ ili ▶ dugme za podešavanje različitih podešavanja.
4. Da biste se vratili ili izašli, pritisnite dugme **Menu**.

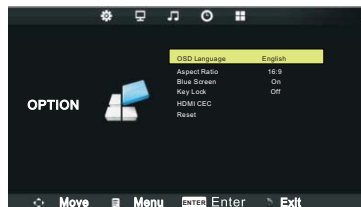


### OSD Jezik

Izaberite "OSD jezik" iz "OPCIJA" menija, a zatim pritisnite dugme **ENTER** da biste izmenili postavku.

### Proporcija širine i visine

 Izaberite "Proporcija širine i visine" iz "OPCIJA" menija, a zatim pritisnite dugme **ENTER** da biste izmenili postavku.

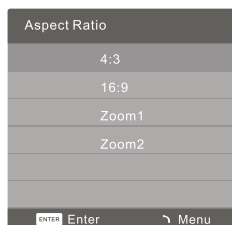

# STELLA LED TV

## 2.6 EKRANSKI MENI

Beleška: U PC režimu, ekranski meni je dostupan. Ekran računara je prilagođen tim komponentama.

Pritisnite ▲ ili ▼ da biste istakli jednu od sledećih opcija, a zatim pritisnite ENTER ili ► da biste ga izabrali.

**Automatsko prilagođavanje** Automatski prilagodite podešavanja sata, faze, H-Pozicije i V-Pozicije.

**Horizontalni položaj.** Pomerajte ekran gore ili dole.

**Vertikalni položaj.** Pomerite ekran nalevo ili nadesno.

**Chasovnik** Podesite brzinu unutrašnjeg sata uzorkovanja.

**Faza** Podesite unutrašnju fazu signala.



## 2.7 Multimedija

### 2.7.1 MEDIJI Funkcije

A. Podržana multimedijalna datoteka:

| Multimedijalni podaci | Format                                                                           |
|-----------------------|----------------------------------------------------------------------------------|
| Slika                 | JPEG; BMP; PNG                                                                   |
| Muzika                | MP3                                                                              |
| Video                 | MPEG-1(.DAT/.MPG)<br>MPEG-2(.MPG/.VOB)<br>MPEG-4(.AVI/.MP4)<br>Digitalni filmovi |
| TXT                   | .txt                                                                             |

B. PC ne može da se poveže preko USB-a.

C. USB kompatibilni uređaji: FAT ili FAT32 je format.

D. Ne tvrdimo da će svi USB uređaji za masovno skladištenje raditi ispravno (operativno ili u smislu napajanja magistrale), i odričemo se bilo kakve odgovornosti za bilo kakav gubitak podataka koji može nastati kao rezultat povezivanja sa ovom jedinicom.

Ažurirajte sve formate datoteka (audio, foto, video)

# STELLA LED TV

 
## 2.7.2 USB Funkcije

### ※Prilagodba USB

1. Pritisnite dugme SOURCE, a zatim pritisnite ▲ ili ▼ dugme da biste istakli "MEDIA" stavku, a zatim pritisnite dugme ENTER.
2. Pritisnite ◀ ili ▶ dugme da biste istakli stavku "FOTO", "MUZIKA", "FILM", "TEKST", a zatim pritisnite dugme ENTER.
3. Pritisnite dugme SOURCE da biste se vratili ili izašli.

## 2.7.3 FOTO

- A. Pritisnite ◀ ili ▶ da biste izabrali fasciklu ili datoteku, pritisnite dugme **ENTER** da biste ušli u sledeći folder, pritisnite **RECALL** da biste se vratili u prethodni folder.
- B. Pritisnite ◀ ili ▶ da biste izabrali **PHOTO** koji želite, pritisnite dugme **ENTER** da biste izabrali listu pesama, a zatim pritisnite ► dugme da biste igrali.
- C. Pritisnite dugme **Displai** do medijske stavke.
- D. Pritisnite ◀ ili ▶ dugme da biste označili medij, a zatim pritisnite dugme **ENTER**.



Pusti/pauziraj, Prethodna, Sledeća, Zaustaviti, Ponovi SVE, Muzika isključena, Lista za reprodukciju, Informacije. .



Rotirajte, Rotirajte, Uvećaj, Umanji, Premesti prikaz, Izvor muzike.

## 2.7.4 MUZIKA

 
- A. Pritisnite ◀ ili ▶ da biste izabrali fasciklu ili datoteku, pritisnite dugme **ENTER** da biste ušli u sledeći folder, pritisnite **RECALL** da biste se vratili u prethodni folder.
- B. Pritisnite ◀ ili ▶ da biste izabrali **MUSIC** koji želite, pritisnite dugme **ENTER** da biste izabrali listu pesama, a zatim pritisnite ► dugme da biste igrali.
- C. Pritisnite dugme **Displai** do medijske stavke.
- D. Pritisnite ◀ ili ▶ dugme da biste označili medij, a zatim pritisnite dugme **ENTER**.



# STELLA LED TV




Pusti/pauziraj, Brzo unazad, Premotaj unapred, Prethodna, Sledeća, Zaustaviti, Ponovi SVE, MUTE.



Lista za reprodukciju, Informacije, Zatvori panel, Idi na vreme, Automatski.

## 2.7.5 FILM

 - Pritisnite ◀ ili ▶ da biste izabrali fasciklu ili datoteku, pritisnite dugme **ENTER** da biste ušli u sledeći folder, pritisnite **RECALL** da biste se vratili u prethodni folder.
- Pritisnite ◀ ili ▶ da biste izabrali **MOVIE** koji želite, pritisnite dugme **ENTER** da biste izabrali listu pesama, a zatim pritisnite ▶ dugme da biste igrali.
- Pritisnite dugme Displai do medijske stavke.
- Pritisnite ◀ ili ▶ dugme da označite medij, a zatim pritisnite dugme **ENTER**.

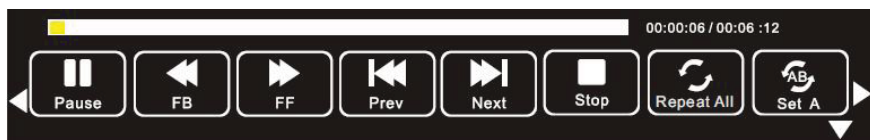

Pusti/pauziraj, Brzo unazad, Premotaj unapred, Prethodna, Sledeća, Zaustaviti, Ponovi SVE, Postavi A/B



Lista za reprodukciju, Informacije, Sporo Fv, Korak Fv, Idi na vreme, Povećaj, Umanji, Proporcija širine i visine



Automatski, Premesti prikaz.

# STELLA LED TV

---

## 2.7.6 TEKST

- A. Pritisnite ◀ ili ▶ da biste izabrali fasciklu ili datoteku, pritisnite dugme **ENTER** da biste ušli u sledeći folder, pritisnite **RECALL** da biste se vratili u prethodni folder.
- B. Pritisnite ◀ ili ▶ da biste izabrali **TEXT** koji želite, pritisnite dugme **ENTER** da biste izabrali listu pesama, a zatim pritisnite ▶I dugme da biste igrali.
- C. Pritisnite dugme **Displai** do medijske stavke.
- D. Pritisnite ◀ ili ▶ dugme da biste označili medij, a zatim pritisnite dugme **ENTER**.



Prethodna stranica, Sledeća stranica, Prethodna, Sledeća, Zaustaviti, Muzika isključena, Lista za reprodukciju, Informacije



Izvor muzike, Automatski.

# STELLA LED TV

## 3. Tehnička specifikacija

|                               |                              |     |
|-------------------------------|------------------------------|-----|
| Model proizvoda               | S32D20                       |     |
| Veličina ekrana               | 32" dijagonala               |     |
| Proporcija širine i visine    | 16:9                         |     |
| Napajanje                     | AC 100-240V~,50/60Hz         |     |
| Potrošnja struje              | 60W                          |     |
| TV sistem                     | PAL B/G D/K I, SECAM B/G D/K |     |
| Audio izlazna snaga (interna) | 8Wx2                         |     |
| Ulazni terminal               | Antenski ulaz                | x 1 |
|                               | USB ulazni                   | x 2 |
|                               | HDMI ulazni                  | x 2 |
|                               | VGA ulazni                   | x 1 |
|                               | PC AUDIO ulazni              | x 1 |
|                               | Audio ulazni ( L/R)          | x 1 |
|                               | Video ulazni                 | x 1 |
|                               | YPbPr ulazni                 | NE  |
|                               | RJ45 ulazni                  | NE  |
|                               | Ulazni CI kartice            | NE  |
|                               | SCART ulazni/izlazni         | NE  |
|                               | DC ulazni (12V)              | NE  |
| Izlazni terminal              | Slušalica                    | x 1 |
|                               | Audio linijski izlazni (L/R) | NE  |
|                               | Video izlazni                | NE  |
|                               | Optički                      | NE  |
|                               | Koaksijalni izlazni          | x 1 |
| Radna temperatura             | 0°C~40°C                     |     |
| Radna vlažnost                | 20% ~ 80% Bez kondenzacije   |     |

*Beleška: Gore navedene karakteristike su podložne promeni bez upozorenja u cilju poboljšanja kvaliteta.*

# STELLA LED TV

## 4 Podržani režimi signala

### A VGA režim

| Rezolucija | Horizontalna frekvencija (Khz) | Vertikalna frekvencija (Hz) | Beleška           |
|------------|--------------------------------|-----------------------------|-------------------|
| 640 x480   | 31.50                          | 60. 00                      |                   |
| 800 x600   | 35.16                          | 56. 25                      |                   |
|            | 37.90                          | 60.00                       |                   |
| 1024 x 768 | 48.40                          | 60. 00                      |                   |
| 1366x 768  | 47.85                          | 60.00                       |                   |
| 1920x1080  | 67.50                          | 60.00                       | Pun HD ploča samo |

*Beleška: Savetuje se da koristite VGA kabl za povezivanje koji nije duži od 5 metara kako biste postigli odgovarajući kvalitet slike.*

### B. HDMI režim

| Rezolucija       | Horizontalna frekvencija (Khz) | Vertikalna frekvencija (Hz) |
|------------------|--------------------------------|-----------------------------|
| 480p             | 31.468                         | 59.94                       |
| 576p             | 31.25                          | 50.00                       |
| 720P             | 45.00                          | 60.00                       |
| 1080i            | 33.75                          | 60.00                       |
| 1080P(1920x1080) | 67. 50                         | 60.00                       |

- Poruka upozorenja će se pojaviti na ekranu ako je signal koji ekran prima izvan dozvoljenog opsega.

-Na ekranu možete proveriti format ulaznog signala.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

# STELLA LED TV

## 5 Jednostavno otklanjanje poteškoća

Ako ekran pokvari ili se njegove performanse drastično promene, proverite ekran u skladu sa smernicama u nastavku. Ne zaboravite da pregledate periferne uređaje kako biste identifikovali koren problema.

| Simptom                                                              | Rešenje                                                                                                                                                                                                                                                                                                 |
|----------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Napajanje se ne može aktivirati.<br>(Indikator napajanja ne svetli.) | -Potvrdite da su oba kraja kabla za napajanje pravilno umetnuta u utičnicu i da li je zidna utičnica funkcionalna.                                                                                                                                                                                      |
| Prikazuje se poruka Nema ulaznog signala.                            | - Proverite da li je signalna linija ispravno povezana.<br>-Potvrdite da su relevantni periferni uređaji uključeni.<br>-Uverite se da izabrani izbor ulaza odgovara ulaznom signalu.                                                                                                                    |
| Daljinski upravljač ne radi ispravno.                                | -Proverite da baterije nisu istrošene. (Koristite novu bateriju.)<br>-Potvrdite da daljinski upravljač radi u svom dometu.<br>- Uverite se da je daljinski upravljač usmeren ka prozoru daljinskog upravljača ekrana.<br>- Uverite se da nema prepreka između daljinskog upravljača i njegovog prozora. |
| Na ekranu se nalaze trepćuće tačke ili pruge.                        | - Uverite se da nema emisija (auto, VN žice ili neonske sijalice) ili drugih potencijalnih izvora smetnji.                                                                                                                                                                                              |
| Boja ili kvalitet slike se pogoršavaju.                              | - Proverite da li su sva video podešavanja, kao što su osvetljenost, kontrast i boja, pravilno podešena.<br>-Za dodatne informacije o video postavkama, pogledajte OSD funkcije poglavlja 2.                                                                                                            |
| Položaj i veličina ekrana su netačni.                                | -Potvrdite da su pozicija i veličina ekrana na odgovarajući način.                                                                                                                                                                                                                                      |
| Slika ili boja su netačne.                                           | - Proverite da li je signalna linija ispravno povezana.<br>-Kada ste povezani sa računarom, možete da promenite rezoluciju računara da biste dobili odgovarajuću sliku. Disparitet u izlaznom signalu računara može uticati na prikaz slike.                                                            |
| Prikažite poruku upozorenja.                                         | - Proverite da li je ulazna linija signala na odgovarajući način obezbeđena.<br>-Izaberite odgovarajući ulazni signal.<br>-Pogledajte Podržani režimi signala u poglavlju 4 za dodatne                                                                                                                  |

## Uputstvo za instalaciju postolja

